



USER MANUAL

How to care for your LUMO product



SAFETY INFORMATION

LUMO products are not intended to be used as a replacement for regular bike lights and should only be used in addition to bike lights to provide added visibility.

All LUMO Glow products have been FCC and CE certified and meet the standards required to retail in the US and Europe.

These documents are available on request along with a Material Safety Data Sheet (MSDS) by emailing info@lumo.cc



FIRST TIME TURNING ON LUMO GLOW

Jackets

- Unwrap the battery pack from the bubble wrap in your delivery. This will be packaged separately from the jacket, along with the USB cable
- Locate the LED connecting wire in the inside left pocket of the jacket as worn and connect to the battery pack
- To change setting, press the power button again

Hold down the white power button for **3 SECONDS** and the lights will start flashing on the high energy pulse setting



- To turn the lights off, hold down the power button for **3 SECONDS**

Backpacks

- Unwrap the battery pack from the bubble wrap in your delivery. This will be packaged inside the pouch in the main compartment of your bag along with the USB charging cable
- Locate the LED connecting wire inside the pouch and connect it to the battery pack

Hold down the white power button for **3 SECONDS** and the lights will start flashing on the high energy pulse setting



- To change setting, press the power button again
- To turn the lights off, hold down the power button for **3 seconds**

CHARGING

Your battery pack will arrive with approximately 70% charged. However, we do recommend you charge it fully before use.

YOUR FIRST CHARGE

- Plug the black USB cable into a computer USB port or a standard USB charger

Place the other end of the cable into the corresponding shape on the bottom of the battery pack. A red light will come on to confirm the battery is charging



- A green light will come on when the battery is fully charged
- Charging times will vary, but a full charge from empty to full usually takes around five hours

CHECKING THE CHARGE LEVEL

A red flashing light will come on automatically when the battery

✓ **WE RECOMMEND YOU CHARGE YOUR BATTERY AFTER EACH RIDE**

pack is less than 25% charged. At all other times the power button will show no colour.

BATTERY LIFE

Jackets

For a single use the battery pack will last for approximately six hours on high power pulse and fourteen hours on low power flash.

Backpacks

For a single use the battery pack will last for approximately four hours on high power pulse and nine hours on low power flash.

The battery packs will last for 400 charges before any degradation occurs (the same as a standard mobile phone).

You can buy a replacement at www.lumo.cc

MAINTENANCE

BATTERY CARE

We've used the highest quality lithium-polymer batteries so you can charge your LUMO Glow product at any point without affecting the performance of the battery. You don't have to drain the battery fully before charging – just charge when you want!

Extended periods of non-use will however affect the battery. If you are storing your bag or jacket away for a few months or longer, charge it to full (solid green indicator). Always store at a cool temperature above 0°C/32°F. Storage in a warm environment may shorten battery life.

WATER PROTECTION

The LEDs are fully waterproof and can be hand washed.

! YOUR BATTERY PACK IS NOT WATERPROOF! PLEASE REMOVE THE PACK FROM THE PRODUCT BEFORE WASHING.

WASHING INSTRUCTIONS



Jackets

Hand wash your jackets with detergent only (no fabric softener) at a temperature of no greater than 30°C/86°F. Washing instructions can be found below for both the Herne Hill Harrington and Regents Parka jackets:

REMOVE BATTERY PACK BEFORE WASHING!

- Hand wash only
- Do not add fabric conditioner
- Do not bleach
- Do not tumble dry
- Do not dry clean
- Cool iron only

! BE VERY CAREFUL TO AVOID THE LED WIRES WHEN IRONING

Bermondsey Backpack

- REMOVE dried mud, sand and grit as soon as possible
- SPONGE WIPE with cold water only.
- HANG TO DRY naturally and completely for at least 24 hours in a dry, well-ventilated area.
- REPROOF the entire garment after cleaning – you can purchase reproofing wax online at www.lumo.cc
- DO NOT dry clean
- DO NOT machine wash
- DO NOT tumble dry
- DO NOT use soap or detergent of any kind
- DO NOT use solvents or bleach
- DO NOT iron or starch
- DO NOT expose to a direct flame or heat source e.g. radiator
- DO NOT expose to direct sunlight for a long period of time (such as rear car window). Doing any of these will damage or remove the proofing and may void the backpacks warranty.

WARRANTY

All LUMO Glow products are covered by a 12 month warranty.

Details of this can be found at www.lumo.cc/returns

12 MONTH WARRANTY